



BOSCH SOLUTION 3000

QUICK USERS GUIDE

For Sales & Service, Please Contact



Phone: 1300 922 429

www.securitystrategies.com.au

This quick user guide is designed for use with the Bosch Solution 3000 alarm system with the ICON LCD codepad.

This quick user guide is designed as a quick simple guide only; please refer to the full users guide provided for more information prior to operating the system.

A copy of the full users guide can be downloaded from our website
<http://www.securitystrategies.com.au/downloads/user-manuals/>



Keypad Display Icons & Meanings



1 2 3 ...	Zone Indicators Refer to zone list on keypad flip cover for zone number device type and location.	On - Indicates which zones are unsealed (motion sensors detecting motion, door open ect) Off - Zone is sealed Flashing fast (0.25 Sec on / 0.25 Sec off) - Indicates that zone has gone into alarm recently, arming the system will clear this away Flashing slow (1 sec on / 1 sec off) - Zone is isolated
	Mains Power	On - Alarm has mains AC power (Normal) Flashing - Alarm has no mains AC power and is running on backup battery only, check alarm plug pack is plugged in and power point is on.
	System Is Disarmed	The alarm system is disarmed (OFF)
	Armed - AWAY mode	The alarm is armed in AWAY mode (all armed)
	Armed - STAY mode	The alarm is armed in STAY mode (partial armed)
	System Fault	Off - There are no system faults (Normal) On / Flashing - There are system faults (power failure, phone line failure, siren failure, low batteries, tampers ect) The codepad may beep once per minute to indicate there is a fault, to stop this press the # AWAY button once to acknowledge the fault. Refer to full User Guide section 5.6 'Fault Analysis Mode' to determine the type of fault and contact Security Strategies if required.
	Armed Indicator	The alarm system is armed in either AWAY or STAY mode.
	Disarmed Indicator	The alarm system is disarmed. The icon will flash if any zone is unsealed letting you know the system may not be ready to arm.

Device Abbreviation Description

PIR - Passive Infra-Red (Motion detector)

Reed / Reed Switch / MRS - Magnetic reed switch, used on doors & Windows

Tamper - Switch installed on control cabinets, sirens, sensors and other devices to detect tampering or removal

How To Arm

To arm the whole alarm

Enter your 4 digit code then the [#AWAY] button

To arm in stay mode (arm only part of the house or office)

Enter your 4 digit code then the [*STAY] button


(Only zones discussed with your installer at time of installation will be armed in this mode)

How To Disarm

Enter your 4 digit code then the [#AWAY] button

Using The 4 Button Remote Controls

To use the remote, press and hold a button for approx 1 second until the red light comes on.

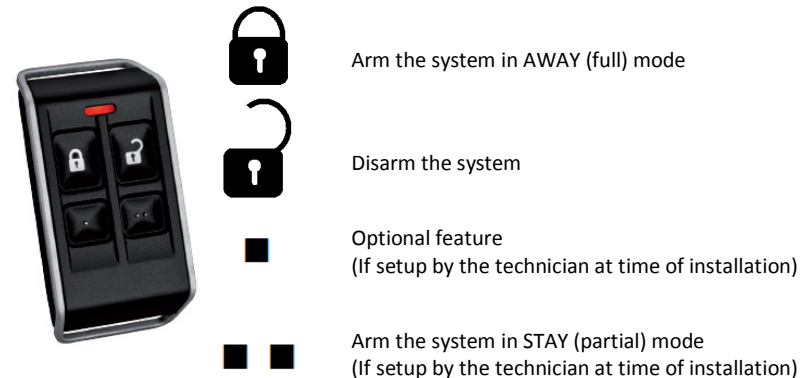

How To Change Codes

Only the 'master code' can be used to add, change or delete codes. If you only have 1 code, typically this will be the 'master code'

1. Enter your master code then press [1] and [#AWAY] for example [2] [5] [8] [0] [1] [#AWAY]
2. Enter the user number (1-32) your wish to change then press [#AWAY] for example, the master code is user number 1, to change the master code enter [1] [#AWAY]
3. Enter the new code for the user then press [#AWAY] for example [5] [6] [7] [8] [#AWAY]

Repeat steps 1-3 above to add any additional codes. Note: For security reasons, avoid any easy to guess codes, ie 1234, your postcode, street address, birth year etc.